

Comparison Chart


	Earasers	Custom Earplugs	Foam / Insert Plugs
Virtually Invisible		×.	×
Reusable			
Hygienic	V	V	×
V Filter Technology	\checkmark	×	×
Flat response at Eardrum	\checkmark	×	×
Replaceable Tips	V .	X	×.
No Impressions Required		×	V
Handles Jaw Movement	\checkmark	×	\checkmark
No Plugged Up Feeling	\checkmark	×	×
Difficulty To Insert	Easy	Moderate	Moderate
Price Over Three Years	Low	High	Medium
Warranty	1 Year	90 days	N/A

Australian Distributer:

SONIC EQUIPMENT

1800 639 263



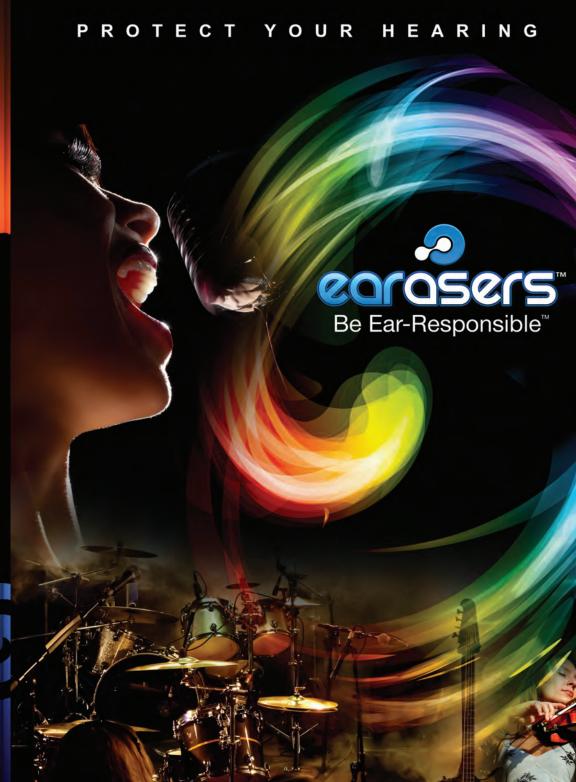

Musicians, Concert Attendees and Music Lovers... Earasers filter loud noise so you can enjoy sound at a safe, comfortable level.

Soft medical grade silicone creates a comfortable fit to each individual's ear shape eliminating the need for costly customized impressions. The open canal shape and filter placement is specifically designed to allow sound to travel closer to the eardrum before being filtered, creating a more natural and clear sound which keeps the musical layering intact.

While most earplugs decrease too many low and high frequencies, these focus on the most sensitive range of the ear canal resonance (1K-6K Hz), and allow some sound to come through in those very low and very high frequencies. This achieves the "Oh WOW" element of clarity that is not found in other plugs.

With reduced noise levels, and less occlusion, horn players, drummers and even singers can enjoy invisible all day comfort and protection.


"Earasers are unbelievable! What really impressed me was the clarity of sound as well as voices. Comfort is also key when listening to Drum Corps drum lines for hours on end. Finally an earplug where music sounds real and cymbals sound crisp. 'Oh Wow', what a remarkable difference they make. Love them."

— Al Murray - Drum Corps Legend, Teacher and all around Whacked Out Guy



Earasers don't plug up your ears and muffle sound like conventional earplugs.

- Reduces dangerous high frequency sounds
- The world's first flat frequency response earplug [+/- 5dB; 250Hz-8KHz]
- Smart Seal[™] technology ensures the perfect fit
- Comfortable and Reusable
- No Plugged Up Feeling
- Soft and flexible material
- Replaces custom earplugs
- Does not sweat, tickle or itch






"As a member of the Boston Symphony Orchestra, clarity of sound is an essential part of my job. Finally with Earasers, I'm able to comfortably protect my hearing while being able to make confident contributions to the music! After tossing aside many types of earplugs because I couldn't trust the output of my instrument based on what I was hearing in my head, with Earasers I'm finally able to play my instruments with confidence knowing that what I'm hearing inside my head is exactly what is coming out of the horn."

- Mike Roylance - Principal Tuba Boston Symphony Orchestra

Attenuation (Sound Reduction) Comparison

TYPICAL MUSIC CONCERT

(dB SPL at Eardrum)

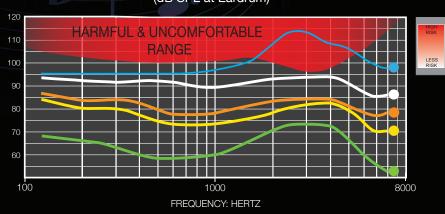

- NATURAL EAR RESONANCE
- EARASERS STANDARD | -19dB Peak | NRR-5
 EARASERS EURO | -26dB Peak | ~NRR13
- EARASERS SAFETY | -31dB Peak | NRR16
- FOAM PLUG | -45dB Peak | ~NRR29